

• When installing and removing this module from the GOT

meged or malfunction.

main be sure to shut off the power at all external switches.If

all the switches are not turned off, the module could be da-

番号	名称	内容	No.	Name	
[1]	カバー	メモリボード本体の保護カバー	[1]	Cover	
[2]	メモリボード取付けネジ	M2.6ネジ 25~35N・cm	[2]	Memory board Installation screw	
[3]	GOT装着コネクタ	GOTへの装着コネクタ	[3]	Connector installed in GOT	
[4]	定格銘板	_	[4]	Rating plate	

三菱電機株式会社:〒100-8313 東京都千代田区丸の内2-2-3(三菱電機ビル)

MITSUBISHI ELECTRIC CORPORATION : MITSUBISHI DENKI BLDG,2-2-3 MARUNOUCHI TOKYO 100-8313

本マニュアルは、エコマークを認定の再生紙を使用しています。 Printed in Japan on recycled paper.

Description

Protective cover for memory

M2.6 screw 25 to 35N·cm Mounting connector GOT

board body

部にて全相遮断してから行ってください。全相遮断しないと、

ユニットの故障や誤動作の原因になります。

【取付け上の注意事項】

▲注意 ▲ユニットは、GOT本体のユーザーズマニュアル記載の一般仕様の環境で使用してください。一般仕様の範囲以外の環境で使用すると、感電、火災、誤動作、製品の損傷あるいは劣化の原因になります。

● GOT本体に本ユニットを装着するときは、メモリボード装着部 に装着し、取付けネジを規定トルク範囲で締め付けてください。取付けネジの締付けがゆるいと、落下、故障、誤動作の 原因になります。取付けネジを締めすぎると、GOT本体やネジ の破損による落下、故障、誤動作の原因になります。

【立上げ・保守時の注意事項】

∴注意 本ユニットの分解、改造はしないでください。 故障,誤動作、ケガ、火災の原因になります。 本ユニットの導電部分や電子部品には直接触れないでください。 ユニットの誤動作、故障の原因になります。 本ユニット内に切粉や配線クズなどの異物が入らないように 注意してください。火災、故障,誤動作の原因になります。 ユニットに触れる前には、必ず接地された金属などに触れて、 したができため。

ムーン「においている前には、ダナスとこれによってにおって、 人体などに帯電している静電気を放電してください。 静電気を放電しないと、ユニットの故障や誤動作の原因にな ります。

【廃棄時の注意事項】

⚠注意					
● 製品を廃棄するときは,	産業廃棄物として扱ってください。				

[INSTALLATION PRECATIONS]

- Use this module in an environment that is within the general specifications written in the GOT User's Manual.If the power supply is used in an environment that is outside of the general specifications then electric shock,fire,malfunction,or product damage or degradation could occur.
- When this unit is installed in the main body of GOT, this unit is installed in the memory board installation part and the installation screw is tightened within the range of a regulated torque. When tightening the installation screw is loose, the fall, the breakdown, and the malfunction are caused. When the installation screw is tightened too much, the fall by the damage of the main body of GOT and the screw, breakdowns, and malfunctions are caused.

[STARTUP AND MAINTENANCE PRE-CAUTIONS]

CAUTION Do not disassemble or modify any module.

- This will cause failure, malfunction, injuries, or fire.
- Do not directly touch the conducted area and electric parts of this module.It may cause damage and malfunctioning of the module.
- This moudule is made of resinous materials, and should be protected from strong shock or impact. It may cause breakdown.
- Before handling the unit, touch a grounded metal or similar object to discharge the static electricity from the human body. Failure to do so may cause the unit to fail or malfunction.

[DISPOSAL PRECAUTIONS]

Disp

pose of this product as industrial waste.	

1. 概 要

本ユーザーズマニュアルは、A9GT-FNB/A9GT-FNB1M/A9GT-FNB2M/A9GT-FNB4M/A9GT-FNB8M形オプション機能用メモリボード(以下メモリボー ドと略します。) について説明したものです。

メモリボードはA985GOT/A975GOT/A970GOT/A960GOT/A956WGOT(以下 GOTと略します。)に装着して、GOTでオプション機能を使用可能にす るユニットです。

また、GOTの画面データ格納用メモリエリアの増設メモリとしても使用できます。(A9GT-FNBは除く) メモリボードを装着することにより下記のオプション機能が使用可

アモリホートを表着することにより下記のオフジョン破削が使用可能になります。

・回路モニタ機能 *	・特殊ユニットモニタ機能
・レシピ機能	 ・音声出力機能
・ネットワークモニタ機能	・リスト編集機能
・モーションモニタ機能	・サーボアンプモニタ機能
・ゲートウェイ機能	

*回路モニタ機能では、ACPU、FXCPUのみモニタできます。

メモリボードを使用す	る場合、下記ROM_BIOSバージョンが必要です。
A9GT-FNB	:A版以降(SWOD5C-GTWORKSA版以降または
	SWOD5C-GOTR-PACK A版以降)
A9GT-FNB1M/2M/4M	: M版以降(SW5D5C-GTWORKS A版以降または
	SW5D5C-GOTR-PACK A版以降)
A9GT-FNB8M	:J版以降(SWOD5C-GTWORKSA版以降または
	SW3D5C-GOTR-PACK A版以降)

 ・GOTIにメモリボードを装着する方法は【A985GOT/A975GOT/A970GOT /A960GOTユーザーズマニュアル(詳細編)】または【A950GOT/ A951GOT/A955GOT/A956GOTユーザーズマニュアル(詳細編)】を 参照してください。
 ・オブション機能の詳細については【GOT-A900シリーズオペレーティングマニュアル(拡張機能・オプション機能編)】を参照して ください。
 ・ROM_BIOSのバージョンの確認方法、インストール方法については CGT Works Version5/GT Designer Version5リファレンスマニュ

(d) mores versions/d) besigner versions リアアレフスマニュ アル]または [GT Designer2 Versionオペレーティングマニュア ル]を参照してください。

製品開梱後、下記製品が入っていることを確認してください。

品名	個 数
メモリーボード本体	1

2. 性能仕様

仕様					
A9GT- FNB	A9GT- FNB1M	A9GT- FNB2M	A9GT- FNB4M	A9GT- FNB8M	
-	フラッシュROM				
_	1M	2M	4M	8M	
1M	2M	3M	5M	9M	
_	10万				
10.0	14. 8			12.6	
	FNB 	FNB FNB1M - 1 - 1 1 2 - 1	A9GT- A9GT- FNB1M FNB2M - フラッ - 1M 2M 1M 2M 3M - 10	A9GT- FNB A9GT- FNB1M A9GT- FNB2M A9GT- FNB4M ー フラッシュROM ー 1M 2M 4M 1M 2M 3M 5M - 10万 10万	

1. Overview

This User's Manual describes the memory board for the A9GT-FNB/A9GT-FNB1M/ A9GT-FNB2M /A9GT-FNB4M/A9GT-FNB8M type option function (hereinafter, memory board). The memory board is the unit which is mounted on the A985GOT/A975GOT/A970GOT /A960GOT/A956WGOT (hereinafter, GOT), to enable use of the option functions with the GOT. Moreover, the memory board can be used as an increase memory of the memory area for the screen storing data of GOT.(Excluding A9GT-FNB)

It is possible to use by installing the memory board and the becoming option function is following functions.

- Circuit monitor function*
 Special unit monitor function
- Recipe function
 Voice output function
- Network monitor function
 List editor function
- Motion monitor function
 Servo amplifier monitor
- Gateway function

* This function is available for ACPU and FXCPU only.

When using the memory board, the following ROM_BIOS Version is required. A9GT-FNB

- : Version A or later (SW5D5C-GTWORKS-E Version A or later or SW1D5C-GOTRE-PACK Version A or later) A9GT-FNB1W/2W/4M
- : Version M or later (SW5D5C-GTWORKS-E Version A or later or SW5D5C-GOTR-PACKE Version A or later) A9GT-FNB8M
- : Version J or later (SW5D5C-GTWORKS-E Version A or later or SW3D5C-GOTRE-PACK Version A or later)

Refer to the [A985GOT/A975GOT/A970GOT/A960GOT User's Manual] or [A950GOT/A951GOT/A953GOT/A956GOT User's manual] for details on mounting the memory board on the GOT. Refer to the [COT-A900 Series Operating Manual (Extended-Option Functions Manual)] for details on the option functions. Refer to the [GT Works Version 5/GT Designer Version 5 Reference Manual or [GT Designer2 Version Operating Manual] for version confirmation and installation of ROM_BIOS.

After opening the container, check that the following products are present.

Description	Quantity
Memory board body	1

2. Performance Specification

	Performance				
Items	A9GT-	A9GT-	A9GT-	A9GT-	A9GT-
	FNB	FNB1M	FNB2M	FNB4M	FNB8M
Type of memory	 Flash ROM 				
Extended memory capacity [byte]	I	1M	2M	4M	8M
Memory capacity of main body of GOT after installing GOT [byte]	1M	2M	ЗМ	5M	9M
Flash_ROM service time for Writing [time]	Ι	100,000			
Weight [g(lb)]	10.0 (0.02)		14.8 (0.03)		12.6 (0.03)