

・ロック強度を超える力がスイッチに加わった場合、スイッチが破壊し、設備が動作 し続ける恐れがあります。

 ・スイッチ本体については、埃や水などの浸入から保護されていますが、ヘッド 部の操作キー挿入口へは異物が入らないようにしてください。早期摩耗、破損 などの原因になります。

 ・スイッチ機能が十分に発揮されないことがあります。製品を落下させないでく ださい。正常動作を損なう恐れがありますので、いかなる場合でも製品の分解・ 改造は行わないでください。

●リリースキーについて ・停電時あるいは緊急時にロックを解除 する場合に用います。

UNLOC

●ヘッドの方向変換について Inck スイッチ本体との合わせ面の所で、 図(A)または(B)に示すようにへ ッド部を 45°回転させた状態で取 付け、取外しができます。 リリースキー また、方向を変換する時も 45°回 転した状態で図に示す回転レバー の凸部をプランジャの凹部溝に合 わせてから、右あるいは左回転させ

希望するヘッドの方向に設定して ください。なお、その際にプランジ ャの凹部が回転レバーの下(内蔵ス イッチ側)に位置していることをご 確認願います。(45°回転状態でへ ッドの方向を設定しない場合、プラ ンジャの凹部が回転レバーを押し 込み、スイッチが動作しなくなると 同時に、これらの機能部品の損傷・ 内蔵スイッチの破損などの原因と なります。) なお、異物を介在さ

最大±0.3

eel==

せないようにご注意ください。 ・取付けの際には必ずメカニカルロ ック/ソレノイドリリース機能チェ ックを行ってください。

●扉の固定について

最大±0.

・扉を閉じているとき(操作キー挿入状態)、扉の自重、扉の緩衝用ゴム等により扉(操 作キー)がセットゾーンを越えて押し戻されることがあります。 ロックを解除する際に操作キーに荷重がかかっているとロックが外れない場合があ ります

・操作キーとキー挿入口のズレは

±0.3 mm以内に納めてくださ

い。(位置ズレ等により早期摩

耗、破損等の原因となります。)

スイッチボディ側上面図

および凸部

回転レバー

操作プランジャ (凹部溝)

内蔵スイッチ

(凸部)

・形D4BLとD4BSの操作キ

一は共用不可です。

ド部側下面図

1 🚱

および凹部溝

回転レバー、プランジャ

Ð Ð

操作プラ

正常な位置関係

. 又イッチボ

 \oplus

表示灯の点灯

扉狀能

動作モード I II Ⅲ

開 閉 閉

項目

セットゾーン内に納まるように止め金(フック)などで扉を固定してください。



一一一部 ●配線について

・ケーブルと導体 推奨接続ケーブル:AWG20~18/ULstvle2464 ケーブルサイズ7芯





●導体の接続方法

 ・外被絶縁シース端面が図に示しますよう にコンジットロ内壁面AまたはB面に合 うようにケーブルをコンジットへ挿入し

てください。 ・配線の作業性を向上させるため、コンジ ットロに近い端子から順番に接続してく

ださい 🕀 ・導体末端に圧着端子を使用しない場合は、

時計巻きできるように端子の右側に挿入 してください。

 ・また、適切な絶縁を保つために導体が端子からはみだすことのないよう、導体 を2,3回捻り確実に挿入し、締付けてください。

-A

E. E. 31 12 23 2

 \otimes

(圧着端子を

使用しない場合)

(active of

●表示灯付きの場合

表示灯は、機械の加工工程の状態を表しています。 色の種類として、橙、緑があります。 橙はソレノイドの通電を示しています。 端子番号E1(+)、E2(-)に並列に接続してください。 緑はドアの開閉を示しています。 メインスイッチに1NC/1NOタイプが使用されている時にはドアが

開いていることを示します。端子番号24、E2(-)に接続してください。 メインスイッチに2NCタイプが使用されているときにはドアが閉じて いることを示します。端子番号22、E2(-)に接続してください。



表示灯の接続はメイン回路

表示灯を指定の端子番号に

図の様に重ねて取付けてく



「当社商品」は、一般工業製品向けの汎用品として設計製造されています。従い まして、次に掲げる用途での使用は意図しておらず、お客様が「当社商品」をこ れらの用途に使用される際には、「当社」は「当社商品」に対して一切保証をいた しません。ただし、次に掲げる用途であっても「当社」の意図した商品用途の 場合や特別の合意がある場合は除きます

(a) 高い安全性が必要とされる用途(例:原子力制御設備、燃焼設備、航空・ 宇宙設備、鉄道設備、昇降設備、娯楽設備、医用機器、安全装置、その他生 命・身体に危険が及びうろ用途

(b) 高い信頼性が必要な用途(例:ガス・水道・電気等の供給システム、24 時 間連続運転システム、決済システムほか権利・財産を取扱う用途など) (c) 厳しい条件または環境での用途(例:屋外に設置する設備、化学的

汚染を被る設備、電磁的妨害を被る設備、振動・衝撃を受ける設備など) (d)「カタログ等」に記載のない条件や環境での用途

*(a)から(d)に記載されている他、「本カタログ等記載の商品」は自動車 (二輪車含む。以下同じ)向けではありません。自動車に搭載する用途には 利用しないで下さい。自動車搭載用商品については当社営業担当者にご相談 ください

*上記は適合用途の条件の一部です。当社のベスト、総合カタログ、データシー トなど最新版のカタログ、マニュアルに記載の保証・免責事項の内容をよく 読んでご使用ください。

オムロン株式会社 インダストリアルオートメーションビジネスカンパニー

●お問い合わせ先 カスタマサポートセンタ 0120-919-066 (フリーコール) 携帯電話・PHS などではご利用いただけませんので、 その場合は下記電話番号へおかけください。 電話 055-982-5015 (通話料がかかります) 【技術のお問い合わせ時間】 ■営業時間:8:00~21:00 ■営業日:365日 ■上記フリーコール以外の FA システム機器の技術窓口 電話 055-977-6389 (通話料がかかります) 【営業のお問い合わせ時間】 ■営業時間:9:00~12:00/13:00~17:30 (土・日・祝祭日は休業) ■営業日:土・日・祝祭日/春期・夏期・年末年始休暇を除く ●FAX によるお問い合わせは下記をご利用ください。 カスタマサポートセンタ お客様相談室 FAX 055-982-5051 ●その他のお問い合わせ先 納期・価格・修理・サンプル・仕様書は貴社のお取引先、 または貴社担当オムロン営業員にご相談ください。



はスイッチの破損を招くので、装置の安全性のためにも行わないでください。

リリースキーを用いて、LOCK位置からU NLOCK位置にするとロックが解除 して安全扉などを開けることができま

す。(メカニカルロックタイプのみ) ・UNLOCK位置の状態では、大型マシン・踏み込み型マシンなど内での予備 調整作業中にドアが閉じても、ロックがかからずマシンも起動しません。

- このリリースキーを、マシンの停止始動用に使用しないでください。
- ・補助ロック解除は責任者のみが行ってください。
- ・不特定な人による容易なリリースキーによるロック解除を避けるため、リリー スキーはLOCK 状態にして、シールワックス (ろう付け) などを施し、封印して ください。リリースキーの操作後は、スイッチの操作を再開する前に、その封 印を復旧してください。
- ・本体にカバーを取り付ける際には、必ず鍵位置はLOCK状態であることを確 認して組み込んでください。
- ●ストッパーの設置について
- 本体をストッパーとして使用しないでください。 操作キーのツバがヘッド部に当たらないように、下図に示すように必ずストッパーを設置 てください

本体に耐久衝撃1000m/s²を超える衝撃を加えないでください



●ソレノイドロックタイプについて

ソレノイドロックタイプは、ソレノイド通雷時しかロックがかかりませんので、急な停電 などにより、ソレノイドへの通電がなくなると、ロックが解除となります。従って機械停 止後も扉内部が危険状態を持続するような機械にはソレノイドタイプは使用できません。

正しい使い方 ■使用環境について (1)油水や薬品のかかる環境において事前に影響(適正)をご確認の上、ご使用ください。 油水、薬品の種類によってはシール性劣化により、接触不良、絶縁不良、漏電、焼 損の恐れがあります。 (2)下記の環境では使用しないでください。 ・温度変化の激しい場所 ・湿度が高く、結露が生じる恐れのある場所 ・振動の激しい場所 ・直接、加工屑や塵埃のかかる場所 ■耐久性について ・スイッチの耐久性は開閉条件により大きく異なります。ご使用にあたっては必ず実 使用条件にて実機確認を行い、性能上問題のない開閉回数内にてご使用ください。 ■取付方法 ●適正締付トルク ねじのゆるみは早期故障の原因となりますので、各部の適正締付トルクにて締付 けてください。 本体取付穴 4.90~5.88 N・m M5ねじ

カバー締付ねじ	1.18∼1.37 N·m	M4ねじ
コンジットコネクタ	1.77∼2.16 N·m	
キャップスクリュー	1.27∼1.67 N·m	
ヘッド締付ねじ	0.78∼0.98 N·m	M3.5ねじ
操作キー取付ねじ	2.35~2.75 N⋅m	M5 ねじ
端子ねじ	0.59∼0.78 N·m	M3ねじ

●本体・操作キーの取付について

本体・操作キーの取付には、M5ねじを4本用い、座金を使って適正締付トルク で堅固に取付けてください。



・当社専用操作キー以外のものは使用しないでください。専用操作キー以外での操作



Instruction Sheet

Please read all instructions before using to ensure proper use and application of the switch. Save this instruction sheet for future reference.



OMRON Corporation

Original instruction

EC Declaration of Conformity

OMRON declares that D4BL is in conformity with the requirements of the following EC Directives: Machinery Directive 2006/42/EC



CAUTION

Do not dismount the operation key from the door intentionally and insert it to the switch with the door open. Do not operate with the shock damper, which is installed into the switch head when the switch is shipped. Machine may start operating and injury or death may be caused.

NOTICE

· Do not disassemble or touch inside under power-on. . Install the operation key so that it will not hit the operator when the door open. In jury may be caused.

• When operating limit switch as a part of a safety circuit or an emergency stop circuit to prevent injury, operate the NC contacts that have direct-opening function in positive mode. For safety, tighten the switch body and operation key with one-way screws or equivalents. Or install a switch protection cover and warning label for safety to prevent easy removal of the switch.

· Connect the fuse to the switch in series to prevent it from short circuit damage. The value of the breaking current of the fuse must be calculated by multiplying rated current by 150 to 200%. When using the switch with EN ratings. use 10 A fuse, type gI or gG that complies with IEC60269. • Do not put the electric power when wiring.

•Do not use the switch where explosive gas, ignitable gas, or any other harmful gases may be present.

Keep the electrical load below the rated value.

Never wire to a wrong terminal

· Be sure to evaluate the switch under actual working conditions after instal lation.

 If the force exceeding holding force is imposed on the operation key, the lock mechanism may break and the equipment in the machine room will start operating.

• Though the switch body is protected from the ingress of dust or water, avoid the ingress of foreign substance through the key hole on the head. Otherwise, wear in short time or break may be caused. · Do not drop the switch. Excessive shock and vibration can cause malfunction or other damage to switch characteristics. Do not disassemble the internal switch, there are no user serviceable parts inside.

Release kev

- · The release key is used to unlock the switch in case of emergency or if the power supply to the switch fails.
- In the case of mechanical lock type. rotate the release key to "Unlock"
- from "Lock" so that locking will be
- released and the door can be open. When release key is set to "Unlock"
- the door will not be locked and no UNLOC power will be supplied to machine even
- if the door is closed. Release kev The safety of operator working in machine room is ensured. • Do not use the release key to start or step the machine. · Only authorized person must use release key.
- To prevent the release key from being used by unauthorized personnel, set it to LOCK and seal it with sealing wax. After the release key operation should be restored to its sealed before restart.
- · Confirm position of the release key is under "Lock" when assembling the cover in the main body
- Stopper
- Do not use the switch as a stopper. Be sure to install a stopper as shown in the following illustration to prevent edge of operation key from hitting the switch directly.

Do not apply shock over the shock resistance 1000m/s² on the switch.



Solenoid lock type

The solenoid lock type locks the door only when power is supplied to the solenoid. The door will be unlocked if the power supply to the solenoid fails. Do not use supplied lock type for machines that continue to move for a while even after the machine power is off. Environment

1. Make sure to the check influence of the environment when using the switch under the ambient condition of oil and chemicals. Certain kinds of oil and chemicals may adversely affect sealing properties, which may cause faulty contacts, faulty insulation. electric shock hazard or the burning.

- 2. Do not use the switch under any of the conditions mentioned below. Frequent temperature changes.
 - · High humidity or where dew condensation may be generated. • Where the switch is subjected to severe vibration.
 - Where the processing trash or dust is directly sprayed.

■The durability of the switch is seriously affected by the number of electrical and mechanical actuations. Evaluate the switch under actual working conditions before permanent installation. Be sure to keep the frequency of operations within specifications. ■ Mounting

●Tightening torque

Adequate tightening torque are as follows and tighten within the range

rango.					
Switch mounting hole	4.90 to 5.88N·m	M5 screw			
Switch cover screw	1.18 to 1.37N⋅m	M4 screw			
Connector at conduit opening	1.77 to 2.16N⋅m				
Cap screw	1.27 to 1.67N⋅m				
Head screw	0.78 to 0.98N·m	M3.5 screw			
Operation key mounting hole	2.35 to 2.75N·m	M5 screw			
Terminal screw	0.59 to 0.78N·m	M3 screw			
Mounting of the switch and operation key					

of the switch and operation key

Four pieces of M5 bolt and spring washer are used for mounting the switch body

When operation key mounted, two pieces of M5 bolt are used. Do not use the operation key other than dedicated Omron's. Otherwise switch may be damaged.



As shown right in (A) and (B), the head

can be mounted and dismounted by

To change the direction of the head,

the rotating lever engages with the

groove of the plunger. Then turn the

the desired direction. At that time.

make sure that the groove of the

rotating the head by 45°





MAX ±0.3

Operation plunger and Protruding part groove mechanism plunger is located under the rotating lever. If the direction of the head is Normal positions of Rotating Lever and Plunger

87

Ð

- A

E. E. 31 12 23 2

(Carrow

(⊗

In the case of

(unprepared)

stranded

conductors

not set when the plunger is rotated by Switch body 45°, the groove of the plunger presses the rotating lever. The head, plunger. or the built-in switch may be μ damaged as a result. Do not let) • \oplus foreign substances invade the switch \oplus during direction change. Make sure that the mechanical lock and solenoid release work properly in

Built-in switch

mounting the head. Fixation of the door

When the door is closed (operation key is inserted), the door (operation key) may return back beyond the set zone mark by the weight of a door, bumper rubber of a door. etc.

The door must be fixed by a hook or the like in order to stay in the set zone mark



Connection of cable

· Cable and conductor Adequate conductor: AWG 20 to 18 (UL Style 2464)



to the conduit opening, edge of the external insulation sheath reaching the line A or B. which is inner surface of metal enclosure. conductors should be connected in sequence beginning with the terminal nearest to the conduit opening.

Indicators

Lighting of indicators	5			
Condition	Operation mode	Ι	Π	Ш
Build-in	Door condition	0pen	Closed	Closed
switch	solenoid	ON	OFF	ON
	Indicator/Wiring			
1NC/1NO+1NC	Orange/ E1-E2	0	\times	0
	Green / 24-E2	0	×	×
	Indicator/Wiring			
2NC+1NC	Orange/ E1-E2	0	\times	0
	Green / 22-E2	\times	0	0
	Indicator/Wiring			
2NC+2NC	Orange/ E1-E2	0	\times	0
	Green / 22-E2	×	0	0
Note · O	Lighted			

Note : O ····· Lighter × ····· off





 Handling of conduit opening
To assure 1P67 protection, use the OMRON type S2-DM series for connectors.
As alternatives for PGI3.5 conduit size, type ABS-08PGI3.5 or ABS-12PG13.5 manufactured by NIPPON FLEX may be used. Apply sealing tape between connector and conduit opening so that the

enclosure will conform to IP67 Use a cable with a diameter suitable for the connector

For unused conduit opening, apply a cap screw provided and tighten it to the specified torque.

■Others

Do not touch the solenoid when the power is supplied, or else solenoid will radiate heat

■Technical specifications

Conformity : Machine Directive, EN IS014119 Approval : EN60947-5-1, GS-ET-19, UL508, CSA C22. 2 No14, GB14048. 5 Utilization category : AC-15 Rating voltage: 250VAC (without indicator), 115VAC (with LED), 250VAC (with neon lamp) Rating current : 3A (without indicator), 6A (with LED), 3A (with neon lamp) Direct opening travel : 20 mm min. Direct opening minimum force : 19.61N Enclosure rating : IP67 (EN60947-5-1), TYPE6P, 13 (UL. CSA) Minimum actuator travel : 23 mm Maximum speed of actuation : 0.5m/sec Minimum speed of actuation : 0.05m/sec Maximum frequency of actuation : 30 operation/min. Short circuit protective device : Use 10A fuse, type gI or gG (IEC60269)

Holding force (Fzh) : 700N (EN ISO 14119) Enclosure rating : IP67

Level of coding : Low

Maintenance and repairs

Please mention in machine manufacturer's instruction manual that the user must not repair nor maintain the switch and must contact machine manufacturer for them.

Suitability for Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product. machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL FOUIPMENT OR SYSTEM

OMRON Corporation Industrial Automation Company

OMRONE UGP DI ALIONI TINGGET UT INCOMENTATION COMPANY Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81:300 / Fax: (31)2356-81-388 OMRON ASIA PACIFIC PTE, LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2),Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011 / Fax: (65) 6835-2711 OMRON SCIENTIFIC TECHNOLOGIES INC. 6550 Dumbarton Circle, Fremont CA 94555-3605 U.S.A. Tel: (1) 510-608-3400 / Fax: (1) 510-744-1442 OMRON (CHINA) CO., LTD. Access Contractor Columbia Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road,PuDong New Area, Shanghai 200120 (China Tel: (86) 21-5037-2222 / Fax: (86) 21-5037-2200 Traceability Information Representative in EU OMRON EUROPE B.V. Wegalaan 67-69 2132 JD Hoofddorp The Netherlands **Manufacturer** OMRON CORPORATION, Safety Device Division

Shiokoji Horikawa, Shimogyo-ku, Kyoto, 600-8530 JAPAN

•As shown in the illustration, insert the cable • As shown in the illustration, for easy wiring

· In the case of wiring stranded conductors, firstly twist the wires a few times. secondly insert them under the right part of the pressure plate as the illustration

Rotating lever

(with protruding part)

Plunger (with groove)