Sti

OMRON

セーフティコントローラ 形 G9SP-N10S 形 G9SP-N10D 形 G9SP-N20S

取扱説明書

このたびはセーフティコントローラ G9SP シリーズをお買い 上げいただきまして、誠にありがとうございます。 この取扱説明書では、G9SP シリーズを導入、使用する上で必

- 要な注意事項を記載しています。 ・G9SP シリーズは電気の知識を有する専門家が扱ってくださ
- この取扱説明書をよくお読みになり、十分にご理解の上、正しくご使用ください。
- また参照マニュアルもあわせてご覧ください。

この取扱説明書はいつでも参照できるように大切に保管ください。

オムロン株式会社

© OMRON Corporation 2010-2014 All Rights Reserved. 2114042-7E

安全上のご注意

● 警告/注意 表示の意味



正しい取扱いをしなければ、この危険のため に、軽傷・中程度の傷害を負ったり万一の場 合には重傷や死亡に至る恐れがあります。ま た、同様に重大な物的損害をもたらす恐れが あります。

正しい取扱いをしなければ、この危険のため

に、時に軽傷・中程度の傷害を負ったり、あ



るいは物的損害を受ける恐れがあります。
 図記号の説明



特定しない一般的な禁止を意味します。

特定しない一般的な使用者の行為を指示する図記号



安全機能が損なわれ、重度の人身障害が万一の場合起こる恐れが あります。G9SP シリーズを交換する場合、交換後の G9SP シリ ーズの機種が正しいことを確認してください。また、交換後の G9SP シリーズが適切にコンフィグレーションされ、正しく動作 することを確認してください。

安全機能が損なわれ、重度の人身障害が万一の場合起こる恐れが あります。メモリカセットからのリストア後は、G9SP シリーズ が適切にコンフィグレーションされ、正しく動作することを確認 してください。

出力が動作し、重度の人身障害が起こる恐れがあります。強制セット/リセットをおこなう場合、十分な安全方策を実施してください。



安全機能が損なわれ、重度の人身障害が万一の場合起こる恐れが あります。安全機能に関わる機器、部品は使用する各国の法的規 制に従い、使用用途に応じた安全規格等に適合した認証品を使用 してください。

安全上の要点

●取り扱いについて

G9SP シリーズを落下させたり、異常な振動や衝撃を加えたりしないで ください。故障や誤動作の原因となります。

- 設置・保管環境について
- 下記の場所には G9SP シリーズを設置、保管しないでください。
- ・直射日光が当たる場所。
- ・定格を超える使用周囲温度、湿度になる場所。
- ・温度変化が急激で結露するような場所。
- ・腐食性ガスや可燃性ガスのある場所。
- ・塵埃、塩分、鉄粉の多い場所。
- ・水、油、薬品などの飛沫がある場所。
- ・定格以上の振動や衝撃が加わる場所。
- 下記のような場所に設置する場合には遮蔽対策を十分に行ってください。 ・静電気などによるノイズが発生する場所
- ・強い電界や磁界が生じる場所
- ・放射能を被曝する恐れのある場所
- ・電源線が近くを通る場所

この商品は「class A」(工業環境商品)です。住宅環境でご利用されると、 電波妨害の原因となる可能性があります。その場合には電波妨害に対す る適切な対策が必要となります。

- 設置・取り付けについて
- G9SP シリーズは IP54(IEC/EN 60529)以上のエンクロージャ内で使用 してください。
- ・制御盤に取り付ける際は、DIN レール(TH35-7.5/TH35-15: IEC60715) または M4 のネジ(締めつけトルク 1.2N・m)ですべてのユニットを正し く取り付けてください。
- ・DIN レール使用時は振動による脱落防止のためエンドプレート(形 PFP-M、別売)を使用して G9SP シリーズを固定してください。すべて のユニットを正しく DIN レールに固定してください。
- ・G9SP シリーズは、放熱のため下図のように縦向きに設置してください。



- ・通風・配線およびユニット交換のため G9SP シリーズの側面に 20mm 以上、上下に 50mm 以上の空間を確保してください。
- ・I/O 端子台、コネクタなど、ロック機構のあるものは必ずロックしてい ることを確認してからご使用ください。
- 次のことを行うときは、電源を **OFF** してください。
- ・拡張ユニットやオプションボードなどを脱着するとき。
- ・装置を組み立てるとき。
- ・ケーブルを接続・配線するとき。端子台を脱着するとき。
- 設置・配線について
- ・外部 I/O 機器配線用の電線サイズは下記を参考にしてください。

単線	$0.32 \sim 0.82 \text{ mm}^2$ AWG22~18
	$0.32 \sim 0.5 \text{ mm}^2 \text{ AWG22} \sim 20 (*1)$
より線	$0.5 \sim 1.3 \text{ mm}^2 \text{ AWG}_{20} \sim 16$
	$0.5 \sim 0.82 \text{ mm}^2$ AWG20~18 (*1)

*1:1 端子に2本の電線を配線する場合、同じ電線を使用してください。

- ・端子台のネジは 0.5N・m のトルクで締めてください。
- ・配線を行う際は、必ず電源を切った状態で行ってください。G9SP シ リーズに接続された外部装置が予期せぬ動作をする恐れがあります。

- ・入力端子には規定の電圧を正しく印加してください。定格以上のDC 電源やAC電源を接続すると規定の機能が発揮されず、安全機能の低 下、製品自体の破損、焼損の原因になります。
- ・通信ケーブルや I/O 信号用ケーブルは高圧線、動力線から離して配線 してください。
- ・端子台などを取り付ける際は、指をはさまないようにしてください。
- ・誤配線は、安全機能の低下の原因になります。配線はすべて正しく行い、稼動前に動作確認してください。
- ・拡張 I/O ユニットやオプションボード、各コネクタは必ずロックして 使用してください。
- ・配線後は、適切に放熱を行うため、塵埃侵入防止用ラベルを必ず外して使用してください。
- ・G9SP シリーズは 24V 側接地で使用しないでください。パソコンなど の周辺機器に接続すると、下図のように外部電源が短絡することがあ ります。



・拡張 I/O ユニットの接続は規定台数までとしてください。

● 電源装置の選択について

- DC 電源装置は下記の項目を満たすようにしてください。
- ・1 次回路・2 次回路間が2 重絶縁または強化絶縁
- ・8Aまでに電流制限された絶縁電源
- ・出力保持時間が 20ms 以上
- ・IEC/EN60950-1, EN50178 の要求を満足する SELV 電源
- 定期点検とメンテナンスについて
- ・交換の際は、必ず電源を切った状態で行ってください。G9SP シリーズに接続された外部装置が予期せぬ動作をする恐れがあります。
- 分解、修理、改造はしないでください。本来の安全機能が失われ危険です。
- 廃棄について
- ・G9SP シリーズを分解する際は、けがをしないよう注意してください。

EU 指令への適合について

G9SP シリーズは下記の EU 指令に適合しています。

EMC 指令: 2004/108/EC 機械指令: 2006/42/EC

- | 筬倾相节 · 2000/42/EC
- また、機械指令に適用される以下の規格に適合しています。 ・EN ISO13849-1:2008 Category 4, PL e
 - IEC/EN 62061 SIL CL 3

1. 仕様

G9SP シリーズの環境仕様、入出力に関する仕様を以下に示します。

項目	仕様
電源電圧 V1,V2	DC24V (DC20.4 ~ 26.4V -15 % +10%)
消費電流 *1	400mA (V1: 300mA, V2: 100mA) (N10S)
	500mA (V1: 300mA, V2: 200mA) (N10D)
	500mA (V1:400mA, V2:100mA) (N20S)
絶縁構造	ClassIII (SELV)
過電圧カテゴリ	П
耐ノイズ性	IEC61131-2 準拠
耐振動	5~ 8.4Hz: 3.5 mm, 8.4~ 150Hz: 9.8 m/s ²
耐衝撃	147m/s ² : 11ms
取り付け方法	DIN レール取り付け (IEC60715
	TH35-7.5/TH35-15)
	または M4 ネジ取り付け
使用周囲温度	$0 \sim +55^{\circ}C$
使用周囲湿度	10~90% (結露なきこと)
保存周囲温度	-20 ~ +75°C
使用周囲雰囲気	腐食性ガスのないこと
保護構造	IP20 (端子台を除く)
端子台ネジ	M3 セルフアップネジ

*1 外部接続機器の消費電流は含みません。

項目	形 G9SP-N10S	形 G9SP-N10D	形 G9SP-N20S
安全入力	10 点	10 点	20 点
安全出力	4 点	16 点	8 点
テスト出力	4 点	6 点	6 点
標準出力	4 点		
質量	290g 以下	440g 以下	430g 以下

■ 安全入力仕様

仕様
シンク入力(PNP 対応)
6mA
DC11V 以上(各入力端子とG1間)
DC5V 以下(各入力端子とG1間)
1mA 以下

■ テスト出力仕様

項目	仕様		
出力タイプ	ソース出力 (PNP 対応)		
定格出力電流	G9SP-N10S	T0, T1	: 60mA 以下
		T2	: 30mA 以下 *1
		T3	: 300mA 以下 *2
		T0-2 合計	: 60mA 以下
	G9SP-N10D	T0, T1, T2	: 60mA 以下
		T3	: 300mA 以下 *2
		T4, T5	: 30mA 以下 *1
		T0-2, T4-5 合計	: 60mA 以下
	G9SP-N20S	T0, T1, T2	: 100mA 以下
		T3	: 300mA 以下 *2
		T4, T5	: 30mA 以下 *1
		T0-2, T4-5 合計	: 120mA 以下
ON 残電圧	1.8V 以下(各	テスト出力端子と V	1 問)
漏れ電流	0.1mA 以下		

*1: オムロン製 形 D40A/D40Z 非接触式ドアスイッチを接続可能

*2: ミューティングランプ出力(断線検知)機能つき

■ 安全出力仕様

仕様
ソース出力 (PNP 対応)
1 出力当たり : 0.8A 以下
4 出力当たり : 1.6A 以下 (N10S,N20S) *1
:1.2A 以下(N10D) *2
1.2V以下(各出力端子とV2間)
2V 以下
0.1mA 以下

*1: So0~So3,So4~So7 の各4点の合計

*2: So0~So3,So4~So7,So8~So11,So12~So15の各4点の合計

注): 安全出力がパルス出力に設定されている場合、接続機器が OFF パルス (パルス幅: 640 µ s) によって誤動作しないようご注意ください。

■標準出力仕様(G9SP-N10Sのみ)

項目	仕様
出力タイプ	ソース出力 (PNP 対応)
ON 残電圧	1.5V以下(各出力端子とV2間)
定格出力電流	100mA 以下

2. 各部の名称と機能

G9SP シリーズの正面図を以下に示します。各部の名称と機能をご確認 ください。

G9SP-N10S



(5)メモリカセットスロット (8)入出力表示LED (9)端子台

(1) 動作表示 LED

LED 名称	色	状態	意味
LED / 1/1	<u> </u>	点灯	运外 運転状態(RUN)
	緑	71117-1	
		点滅	アイドル状態 (IDLE)
	赤		運転停止異常(Critical fault)
MS	~~	点滅	運転停止異常(Abort)
	緑/赤	点滅	初期処理中またはコンフィグレーション待ち状態
		消灯	V1/G1(内部制御回路用電源)に電源が供給されていない
	-	相灯	またはメモリカセット機能実行中
FORCE	黄	点灯	強制セット/リセット有効状態(強制モード)
FORCE	臾	消灯	強制セット/リセット無効状態(通常モード)
		点灯	有効なコンフィグレーションを持ち、ロック済
LOCK	黄	点滅	有効なコンフィグレーションを持つが、未ロック状態
		消灯	有効なコンフィグレーションを持っていない
		点灯	運転停止異常が発生中
ERR/ALM	赤	点滅	運転継続異常が発生中
		消灯	異常なし
			・メモリカセット挿入して通常モードで起動中
		点灯	・メモリカセットによるバックアップコピーを正常完
			了
1.62	黄	点滅	MC機能実行モードで起動。同時に、I/O LED(黄色)に
MC		(0.5 秒)	て、コンフィグレーション ID を表示。
		点滅	MC 機能(バックアップコピー、リストア)処理中
		(0.25 秒)	
		消灯	メモリカセット未挿入で起動中
00101	#	点滅	USB 経由でデータ送受信中
COMM	黄	消灯	USB 経由でデータ送受信していない

(2) USB ポート

USB ケーブルを接続するタイプBのコネクタです。パソコンからコンフ ィグレーションやモニタをおこないます。

(3) プッシュスイッチ

メモリカセットへ/からのバックアップ/リストア時に1秒間押下します。 (4) ディップスイッチ

NO.	名称	出荷時設定 説明		
SW1	未使用	OFF 常時 OFF にて使用ください		
SW2	未使用	OFF 常時 OFF にて使用ください		
SW3	Baudrate	OFF	シリアル通信速度設定	
SW4	BackUp	OFF	バックアップモード設定	

SW3 を ON して起動するとシリアル通信速度 115,200bps として動作します。(出荷時設定:9,600bps)

SW4をONして起動するとG9SP内部のコンフィグレーションデータを メモリカセットにバックアップコピーします。

(5) メモリカセットスロット

メモリカセット 形 CP1W-ME05M を装着します。メモリカセットには G9SP のコンフィグレーションデータを転送し保存することができます。 (6) オプションボードスロット

以下のオプションボードを装着できます。

・ RS-232C オプションボード 形 CP1W-CIF01

・イーサネットオプションボード 形 CP1W-CIF41 (Ver.2.0 以降)

(7) 拡張 I/O ユニットコネクタ

以下の CP シリーズの拡張 I/O ユニットを最大2 台まで接続することができます。

· 20 点入出力ユニット 形 CP1W-20EDT/CP1W-20EDT1

· 32 点出力ユニット 形 CP1W-32ET/CP1W-32ET1

(8) 入出力表示 LED (I/O LED)

LED 名称	色	状態	意味
		点灯	出力用電源(V2/G2)が投入されています。
OUT PWR	緑消灯		出力用電源(V2/G2)が投入されていません。もしくは 異常により遮断されています。
	黄	点灯	入出力信号が ON 状態
Si0~Si19	赤	点灯	I/O 回路で異常を検出した デュアルチャンネル設定で Discrepancy 異常が発生
So0~7 00~3	赤	点滅	デュアルチャンネル設定で相手チャネルにて異常を 検出
_		消灯	入出力信号が OFF 状態 異常を検出していない

(9) 端子台

電源や入出力機器を接続します。

3. 外形寸法



4. 内部接続と外部配線例

G9SP-N10S

上側 V1 G1 Si1 Si3 Si5 Si7 Si9 T1 T3 (17pin) NC Si0 Si2 Si4 Si6 Si8 T0 T2

下側 NC So0 So2 O0 O2 NC NC (14pin) V2 G2 So1 So3 O1 O3 NC

G9SP-N10D

上側 V1 G1 Si1 Si3 Si5 Si7 Si9 NC NC T1 T3 T5 (24pin) NC Si0 Si2 Si4 Si6 Si8 NC NC T0 T2 T4 NC

下側 NC So0 So2 So4 So6 So8 So10 So12 So14 (19pin) V2 G2 So1 So3 So5 So7 So9 So11 So13 So15

G9SP-N20S

上側 V1 G1 Si1 Si3 Si5 Si7 Si9 Si11 Si13 Si15 Si17 Si19 (24pin) NC Si0 Si2 Si4 Si6 Si8 Si10 Si12 Si14 Si16 Si18 NC

 (24pin)
 NC
 Si0
 Si2
 Si4
 Si6
 Si8
 Si10
 Si12
 Si14
 Si16
 Si18

 下側
 NC
 So0
 So2
 So4
 So6
 NC
 T0
 T2
 T4

(19pin) V2 G2 So1 So3 So5 So7 NC T1 T3 T5

● 端子名称

端子名称	説明
V1/G1	内部回路・入力回路用電源端子(DC24V)
V2/G2	出力回路用電源端子(DC24V)
NC	未接続 (なにも接続しないでください)
Si0 - Si19	安全入力端子
T0 - T5	テスト出力端子
So0 - So15	安全出力端子
00 - 03	標準出力端子

内部接続と外部配線例



● I/O 配線例:非常停止アプリケーション (マニュアルリセット)



4. 参照マニュアル

セーフティコントローラ G9SP シリーズの関連マニュアルには、次の ようなものがあります。併せてご覧ください。

マニュアル名称	Man. No.
G9SP シリーズ セーフティコントローラ ユーザーズマニュアル	SLJB-306
G9SP シリーズ セーフティコントローラ コマンドリファレンスマニュアル	SJLB-307
G9SP シリーズ セーフティコントローラ ホスト接続マニュアル	SJLB-308

ご承諾事項

当社商品は、一般工業製品向けの汎用品として設計製造されています。従いまして、次に掲げる用途での使用を意図しておらず、お客様が当社商品をこれらの 用途に使用される際には、当社は当社商品に対して一切保証をいたしません。た だし、次に掲げる用途であっても当社の意図した商品用途の場合や特別の合意 がある場合は除きます。

- (a) 高い安全性が必要とされる用途(例:原子力制御設備 燃焼設備 航空・宇宙設備 鉄道設備 昇降設備 娯楽設備 医用機器 安全装置 その他生命・身体に危険が及びうる用途)
- (b)高い信頼性が必要な用途(例:ガス・水道・電気等の供給システム、24時間 連続運転システム、決済システムほか権利・財産を取扱う用途など)
- (c) 厳しい条件または環境での用途(例:屋外に設置する設備、化学的汚染を被る設備、電磁的妨害を被る設備、振動・衝撃を受ける設備など)
 (d) カタログ等に記載のない条件や環境での用途
- * (a)から(d)に記載されている他、本カタログ等記載の商品は自動車(二輪車含む。以下 同じ)向けではありません。自動車に搭載する用途には利用しないで下さい。自動車搭載 用商品については当社営業担当者にご相談ください。
- * 上記は適合用途の条件の一部です。当社のベスト、総合カタログ、データシート等最新 版のカタログ、マニュアルに記載の保証・免責事項の内容をよく読んでご使用ください。

オムロン株式会社 インダストリアルオートメーションビジネスカンパニー ●製品に関するお問い合わせ先 お客様相談室 オムロン クイック IIII 1 1 2 0 - 9 hh 携帯電話・PHS・IP電話などではご利用いただけませんので、下記の電話番号へおかけください。 電話 055-982-5015(通話料がかかります) ■営業時間:8:00~21:00 ■営業日:365日 ●FAXやWebページでもお問い合わせいただけます。 FAX 055-982-5051 / www.fa.omron.co.jp ●その他のお問い合わせ 納期・価格・サンプル・仕様書は貴社のお取引先、または貴社 担当オムロン販売員にご相談ください。 オムロン制御機器販売店やオムロン販売拠点は、Webページで ご案内しています。

お断りなく仕様などを変更することがありますのでご了承ください。

OMRON

G9SP-N10S G9SP-N10D **G9SP-N20S Safety Controller**

INSTRUCTION MANUAL

This manual primarily describes precautions required in installing and operating G9SP-series Controllers.

- Only qualified persons trained in professional electrical procedures must be allowed to handle a G9SP-series Controller.
- Before operating a G9SP-series Controller, read this manual through to acquire sufficient knowledge of the Controller.

To ensure safe and correct use of the G9SP-series Controller, also read related manuals.

Keep this manual for future reference.

Make sure that information written in this document are delivered to the final user of the product.

OMRON Corporation

© OMRON Corporation 2010-2014 All Rights Reserved. 2114042-7F

EU Declaration of Conformity

OMRON declares that G9SP-series Controllers are in conformity with the requirements of the following EU Directives:

EMC Directive 2004/108/EC

Machinery Directive 2006/42/EC

Standards

G9SP-series Controllers are designed and manufactured in accordance with the following standards:

EN ISO13849-1:2008 Category 4, PL e IEC/EN 62061 SIL CL 3

!WARNING

Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.

Meaning of Alert Symbols

The following alert symbols are used in this manual.



Indicates prohibited actions

Indicates mandatory actions

Alert Statements

! WARNING
Electric shock may occur. Do not touch any terminals while power is being supplied.
Serious injury may possibly occur due to loss of required safety functions. Do not use the G9SP-series Controller's test outputs or standard outputs as safety outputs.
Serious injury may possibly occur due to loss of required safety

functions. Do not use the G9SP-series Controller's network data as safety data.

Serious injury may possibly occur due to loss of required safety functions. Do not use indicators on the G9SP-series Controller for safety operations.

Serious injury may possibly occur due to breakdown of safety outputs or test outputs. Do not connect loads beyond the rated values to the safety outputs and test outputs.

! WARNING

Serious injury may possibly occur due to loss of required safety functions. Wire the G9SP-series Controller properly so that the 24VDC line does NOT touch the outputs accidentally or unintentionally. Serious injury may possibly occur due to loss of required safety functions. Ground the 0V line of the power supply for external output devices so that the devices do NOT turn ON when the safety output line

or the test output line is grounded. Serious injury may possibly occur due to loss of required safety functions. Perform user testing and confirm that all of the G9SP-series Controller's configuration data and operation is correct before starting system operation.

Serious injury may possibly occur due to loss of required safety functions. When replacing a G9SP-series Controller, confirm the model of the Controller is correct and configure the replacement Controller suitably and confirm that it operates correctly.

Serious injury may possibly occur due to loss of required safety functions. When the configuration data is restored by using a Memory Cassette, a test must be performed to confirm that the safety devices function correctly.

Outputs may operate, possibly resulting in serious injury. Take sufficient safety measures before force-setting or force-resetting variables in the program.

Serious injury may possibly occur due to loss of required safety functions. Use devices and parts related to safety functions according to legal regulations in the applicable country. Use certified items compliant with safety standards corresponding to the intended application.



Handle with Care

Do not drop the G9SP-series Controller or subject it to excessive vibration or mechanical shock. The G9SP-series Controller may be damaged and may not function properly.

Installation and Storage Environment

Do not use or store the G9SP-series Controller in any of the following locations:

- · Locations subject to direct sunlight
- · Locations subject to temperatures or humidity outside the range specified in the specifications
- · Locations subject to condensation as the result of severe changes in temperature
- · Locations subject to corrosive or flammable gases
- · Locations subject to dust (especially iron dust) or salts
- · Locations subject to water, oil, or chemicals
- · Locations subject to shock or vibration

Take appropriate and sufficient measures when installing systems in the following locations. Inappropriate and insufficient measures may result in malfunction.

- · Locations subject to static electricity or other forms of noise
- · Locations subject to strong electromagnetic fields
- · Locations subject to possible exposure to radioactivity
- · Locations close to power supplies

This is a class A product designed for use in industrial environments. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.

Installation and Mounting

- · Use the G9SP-series Controller within an enclosure with IP54 protection or higher according to IEC/EN 60529.
- Use DIN Track (TH35-7.5/TH35-15 according to IEC 60715) or M4 screws with a tightening torque of 1.2 N·m (10.5 lb·in) to install the G9SP-series Controller into the control panel.
- Mount the G9SP-series Controller to the DIN Track using PFP-M End Plates (not included with the G9SP-series Controller) to prevent it from falling off the DIN Track because of vibration. Correctly mount all Units to DIN Track.
- · Install the G9SP-series Controller in the vertical direction shown below to ensure adequate cooling.





- Space must be provided around the G9SP-series Controller, at least 20 mm from its side surfaces and at least 50 mm from its top and bottom surfaces, for ventilation and wiring.
- Be sure to lock all locking mechanisms, such as those on I/O terminal blocks and connectors, before attempting to use the Controller.

Turn OFF the power supply before performing any of the following.

- Connecting or disconnecting Expansion I/O Units, Option Boards, or any other Units
- Assembling the Controller
- · Connecting cables or wiring
- Connecting or removing terminal blocks

Installation and Wiring

 Use the following to wire external I/O devices to the G9SP-series Controller.

Solid wire	0.32 to 0.82 mm ² 0.32 to 0.5 mm ²	AWG22 to AWG18 AWG22 to AWG20*1
Stranded	0.5 to 1.3 mm ²	AWG20 to AWG16
wire	0.5 to 0.82 mm ²	AWG20 to AWG18*1

- *1: When wiring two wires to one terminal. Use two wires of the same type and thickness.
 - M3 self-rising screws are used for all screw terminals.
 - Tighten the terminal block screws to a torque of 0.5 N·m (4.4 lb·in).
 - Disconnect the G9SP-series Controller from the power supply before starting wiring. Devices connected to the G9SP-series Controller may operate unexpectedly.
 - Properly apply the specified voltage to the G9SP-series Controller inputs. Applying an inappropriate DC voltage or any AC voltage will cause the G9SP-series Controller to fail.
 - Be sure to separate the communications cables and I/O cables from high-voltage/high-current lines.
 - Be cautious not to get your fingers caught when attaching connectors to the plugs on the G9SP-series Controller.
 - Incorrect wiring may lead to loss of safety functions. Wire conductors correctly and verify the operation of the G9SP-series Controller before using the system in which the G9SP-series Controller is incorporated.
 - Lock the connectors on Option Units or Expansion I/O Units before using the Units.
 - After wiring is completed, be sure to remove the label for wire clip entry prevention from the G9SP-series Controller to enable heat to escape for proper cooling.
 - Do not ground the 24-V side of the power supply to the G9SP-series Controller. If you do so, an unwanted current flow shown in the following diagram may occur when you connect a computer or other peripheral device.



Power Supply Selection

Use a DC power supply satisfying the following requirements.

- The secondary circuit of the DC power supply must be isolated from the primary circuit by double insulation or reinforced insulation.
- The output hold time must be 20 ms or longer.
- The DC power supply must be an SELV power supply that satisfies the requirements of IEC/EN 60950-1 and EN 50178.

Periodic Inspections and Maintenance

- Disconnect the G9SP-series Controller from the power supply before replacing the Controller. Devices connected to the G9SP-series Controller may operate unexpectedly.
- Do not disassemble, repair, or modify the G9SP-series Controller. Doing so may lead to loss of safety functions.

Disposal

• Be cautions not to injure yourself when dismantling the G9SP-series Controller.

Precautions for Compliance with UL Standards and CSA Standards

Use the following installation information instead of the general information in the instruction manual in order to use the product under certified conditions of UL and CSA when the product is installed in the USA or Canada. These conditions are required by NFPA 70 (National Electrical Code in the USA) and Part 1 of the Canadian Electrical Code in Canada and may vary from information given in the product manuals or safety precautions. G9SP-series Controllers have not been evaluated by UL as Programmable Safety Controllers, and the Safety functions of these devices have not been evaluated by UL as well.

- Surrounding air temperature: 55°C
- Do not use crimp terminals for field wiring.
- The DC power supply must satisfy the requirements for an isolated power supply with external 8 A overcurrent protection.
- Do not use the +5 V output from the CP1W-CIF01 for anything other than the NT-AL001.
- A G9SP-series Controller has two sets of power supply terminals, one for the main power and one for I/O power. Connect both of them to the same power source.

Ratings

Controller	Rating for UL
	Source: 24 V dc, 500 mA, isolated source
	Input: 24 V dc, 6 mA /P, 20 points
	Output: 24 V dc (GEN) (P.D.), 0.8 A /P, 8 points
	Rated total currents of So0 to 3, So4 to 7 are 1.6 A each
G9SP-N20S	Test Output:
	T0 – T2: 24 V dc (GEN), 100 mA
	T3: 24 V dc (GEN)(TUN), 300 mA
	T4, T5: 24 V dc (GEN), 30 mA
	Rated total currents of T0 – T2, T4 and T5 are 120 mA
G9SP-N10D	Source: 24 V dc, 500 mA, isolated source
	Input: 24 V dc, 6 mA, 10 points
	Output: 24 V dc (GEN) (P.D.), 0.8 A /P, 16 points
	Rated total currents of So0 to 3, So4 to 7, So8 to 11,
	So12 to So15 are 1.2 A each
	Test Output:
	T0 – T2: 24 V dc (GEN), 60 mA
	T3: 24 V dc (GEN)(TUN), 300 mA
	T4, T5: 24 V dc (GEN), 30 mA
	Rated total currents of T0 – T2, T4 and T5 are 60 mA
G9SP-N10S	Source: 24 V dc, 400 mA, isolated source
	Input: 24 V dc, 6 mA /P, 10 points
	Output: 24 V dc (GEN) (P.D.), 0.8 A /P, 1.6 A /Unit, 4 points
	Test Output:
	T0, T1: 24 V dc (GEN), 60 mA
	T2: 24 V dc (GEN), 30 mA
	T3: 24 V dc (GEN)(TUN), 300 mA
	Rated total currents of T0 – T2 are 60 mA
	Standard Output: 24 V dc (GEN), 100 mA, 4 points

TERMINAL MARKINGS

Terminals	Function		
V1/G1	Power supply terminals for Internal/Input circuits (24 VDC).		
V2/G2	Power supply terminals for output circuits (24 VDC).		
NC	Not used (Do not connect)		
Si0 to Si19	Input terminals		
T0 to T5	Test output terminals		
So0 to So15	Output terminals		
O0 to O3	Standard output terminals		

1. SPECIFICATIONS

The environment and I/O specifications of G9SP-series Controllers are given below.

Item	Specification
Power supply voltage (V1, V2)	24 VDC (20.4 to 26.4 VDC -15%+10%)
Current consumption *1	400 mA (V1: 300 mA, V2: 100 mA) (N10S)
	500 mA (V1: 300 mA, V2: 200 mA) (N10D)
	500 mA (V1: 400 mA, V2: 100 mA) (N20S)
Isolation class	Class III (SELV)
Overvoltage category	II
Noise immunity	Compliant with IEC61131-2
Vibration resistance	5 to 8.4 Hz: 3.5 mm
	8.4 to 150 Hz: 9.8 m/s ²
Shock resistance	147m/s ² : 11ms
Mounting	DIN Track (IEC 60715 TH35-7.5 / TH35-15)
	or M4 screws
Ambient operating temperature	0 to 55°C
Ambient operating humidity	10% to 90% (with no condensation)
Ambient storage temperature	–20 to 75°C
Atmosphere	No corrosive gas
Degree of protection	IP20 except terminal blocks
Terminal screws	M3 self-rising screws

*1: The following current consumption is not included in the current consumption of external devices.

Item	G9SP-N10S	G9SP-N10D	G9SP-N20S
Safety inputs	10 points	10 points	20 points
Safety outputs	4 points	16 points	8 points
Test outputs	4 points	6 points	6 points
Standard outputs	4 points		
Weight	290 g max.	440 g max.	430 g max.

Safety Input Specifications

Item	Specification	
Input type	Sinking inputs (PNP compatible)	
Input current	6 mA	
ON voltage	11 VDC min. (between inputs and G1)	
OFF voltage	5 VDC max. (between inputs and G1)	
OFF current	1 mA max.	

Test Outputs

Item	Specification		
Output type	Sourcing outputs (PNP)		
Rated output current	G9SP-N10S	T0, T1:	60 mA max.
		T2:	30 mA max. ^{*1}
		Т3:	300 mA max. ^{*2}
		T0-2 total:	60mA max.
	G9SP-N10D	T0, T1, T2:	60 mA max.
		T3:	300 mA max. *2
		T4, T5:	30 mA max. ^{*1}
		T0-2, T4-5 total:	60mA max.
	G9SP-N20S	T0, T1, T2:	100 mA max.
		T3:	300 mA max. *2
		T4, T5:	30 mA max. ^{*1}
		T0-2, T4-5 total:	120 mA max.
ON residual voltage	1.8 V max. (between outputs and V1)		
Leakage current	0.1 mA max.		

*1: Connection to OMRON D40A/D40Z Non-Contact Door Switch is possible.

*2: With the Muting Lamp Output (open circuit detection).

Safety Output Specifications

Item	Specification
Output type	Sourcing outputs (PNP)
Rated output current	0.8 A max./point
	1.6 A max./4 points (N10S or N20S) ^{*1}
	1.2 A max./4 points (N10D) ^{*2}
ON residual voltage	1.2 V max. (between outputs and V2)
OFF residual voltage	2 V max.
Leakage current	0.1 mA max

*1: Total current for So0 to So3 and So4 to So7

*2: Total current for So0 to So3, So4 to So7, So8 to So11, and So12 to So15. Note: When a safety output is set as a pulse output, make sure that the connected

device does not malfunction for the OFF pulse (pulse width: 640 $\,\mu$ s).

Standard Output Specifications (G9SP-N10S)

Item	Specification
Output type	Sourcing outputs (PNP)
ON residual voltage	1.5V max.(between outputs and V2)
Rated output current	100mA max.

2. NOMENCLATURE AND FUNCTIONS

• G9SP-N10S



G9SP-N10D/G9SP-N20S



(1) Indicators

Indicator	Color	Status	Description
MS	Green	Lit	Operating
		Flashing	Idle
	Bed	Lit	Critical fault
(Module	Rea	Flashing	Recoverable fault (abort state)
Status)	Green/ Red	Flashing	Self testing or configuring
	-	Not lit	No power
FORCE	Yellow	Lit	Force-set/reset enabled
FORCE	reliow	Not lit	Force-set/reset disabled
		Lit	Locked valid configuration
LOCK	Yellow	Flashing	Unlocked valid configuration
		Not lit	Invalid configuration
		Lit	Fatal error
ERR/ALM	Red	Flashing	Non-fatal error
		Not lit	Normal operation
		Lit	Startup in normal mode is in process with a Memory Cassette inserted. A backup to a Memory Cassette was successfully completed.
MC (Memory Cassette)	Yellow	Flashing slowly	Startup in MC Function Execution Mode. The configuration ID is indicated on the I/O indicators (yellow) at the same time.
		Flashing quickly	MC function (backup or restore) is in process.
		Not lit	Startup is in process with no Memory Cassette inserted.
COMM	Yellow	Flashing	USB data transfer is in progress
(USB)	1 CIIOW	Not lit	No USB data transfer is in progress.

(2) USB Port

Connect a USB cable to this port to configure and monitor from a computer. (Type B connector)

(3) PUSH Switch

Push for 1 second in to backup/restore data from/to the Memory Cassette.

(4) DIP Switch

Pin	Name	Default	Description
SW1	(Reserved)	OFF	Leave set to OFF
SW2	(Reserved)	OFF	Leave set to OFF
SW3	Baudrate	OFF	Serial communications baud rate setting
SW4	Backup	OFF	Backup mode setting

If you turn ON the Controller with pin SW3 turned ON, serial communications will be performed at 115,200 bps. (The default setting is for 9,600 bps.)

Starting with SW4 turned ON backs up G9SP internal configuration data to the Memory Cassette.

(5) Memory Cassette Slot

Mount a CP1W-ME05M Memory Cassette in this slot. G9SP configuration data can be transferred to a Memory Cassette. (6) Option Board Slot

- The following Option Boards can be mounted:
- CP1W-CIF01 ver. 2.0 RS-232C Option Board
- CP1W-CIF41 Ethernet Option Board (unit version 2.0 or later)
- (7) Expansion I/O Unit Connector

Up to two of the following CP-series Expansion I/O Units can be connected:

- CP1W-20EDT/CP1W-20EDT1 20-point I/O Unit
- CP1W-32ET/CP1W-32ET1 32-point Output Unit

(8) I/O Indicators

Indicator	Color	Status	Meaning						
		Lit	Output power (V2/G2) is ON.						
OUT PWR	T PWR Green		Output power (V2/G2) is not ON, or an error is blocking the power.						
	Yellow	Lit	The I/O signal is ON.						
Si0 to Si19 So0 to 7	Red	Lit	 An error was detected in the I/O circuit. Discrepancy error occurred for a dual channel setting. 						
O0 to 3	Red	Flashing	 An error was detected in the other channel of a dual channel pair. 						
	_	OFF	The I/O signal is OFF.No error has been detected.						

(9) Terminal Block

Connect the power supply and I/O devices to the terminal block.

3. DIMENSIONS



4. INTERNAL CIRCUITS AND WIRING

G9SP-N10S

Top V1 G1 Si1 Si3 Si5 Si7 Si9 (17 pins) NC Si0 Si2 Si4 Si6 Si8 Ti	T1 T3 0 T2
Bottom NC So0 So2 O0 O2 NC Nu (14 pins) V2 G2 So1 So3 O1 O3 NC • G9SP-N10D </td <td>C</td>	C
Top V1 G1 Si1 Si3 Si5 Si7 Si9 (24 pins) NC Si0 Si2 Si4 Si6 Si8 Nt	NC NC T1 T3 C NC T0 T2 T4
Bottom NC So0 So2 So4 So6 So8 So (19 pins) V2 G2 So1 So3 So5 So7 So9 • G9SP-N20S So3 So5 So7 So9 So5 So7 So5 So5 So7 So5 So5 So7 So5 So5 So7 So5 So	
Top V1 G1 Si1 Si3 Si5 Si7 Si9	Si11 Si13 Si15 Si17 S

Тор	V1	0	à1	Si	1	Si3	3 S	i5	S	i7	S	i9	Si	11	Si	13	Si	15	Si	17	Si1	9	
(24 pins)	1	VC	Si	i0	Si	2	Si4	S	i6	S	i8	Si	10	Si	12	Si	14	Si	16	Sit	18	NC]
																							-

 Bottom
 NC
 So0
 So2
 So4
 So6
 NC
 T0
 T2
 T4

 (19 pins)
 V2
 G2
 So1
 So3
 So5
 So7
 NC
 T1
 T3
 T5

Terminals	Function					
V1/G1	Power supply terminals for Internal/Input circuits (24 VDC).					
V2/G2	Power supply terminals for output circuits (24 VDC).					
NC	Not used (Do not connect)					
Si0 to Si19	Safety input terminals					
T0 to T5	Test output terminals					
So0 to So15	Safety output terminals					
O0 to O3	Standard output terminals					

Internal Circuits and Wiring Example



I/O Wiring Example: Emergency Stop (Dual Channel) with Manual Reset



Related Manuals

Be sure you understand the information provided in all related manuals before attempting to install or operate a G9SP-series Controller. Be sure to read the precautions provided in the following manuals.

Manual name	Cat. No.
G9SP-series Safety Controller Operation Manual	Z922
G9SP-series Safety Controller Instruction Reference Manual	Z923
G9SP-series Safety Controller Host Connection Manual	Z924

SUITABILITY FOR USE

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

OMRON

T5 NC

> OMRON Corporation (Manufacturer) Shiokoji Horikawa, Shimogyo-ku, Kyoto, 600-8530 Japan

Contact: www.ia.omron.com

Regional Headquarter OMRON EUROPE B.V. (Importer in EU) Wegalaan 67-69, NL-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300 Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011 Fax: (65) 6835-2711 OMRON SCIENTIFIC TECHNOLOGIES INC. 6550 Dumbarton Circle, Fremont CA 94555 USA Tel: (1) 510-608-3400 Fax: (1) 510-744-1442

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2220 Fax: (86) 21-5037-2200

Note: Specifications subject to change without notice. Printed in China