OMRON

₩ZFV-SR

スマートセンサ 形 ZFV-A□□用 センサヘッド

取扱説明書

このたびは、本製品をお買い上げいただきまして、まことにありがとうございます。ご使用に際しては、次の内容をお守りください。

- ・電気の知識を有する専門家が扱ってください。
- ・この取扱説明書をよくお読みになり、十分にご理解のうえ、正しくご使用 ください。
- ・この取扱説明書はいつでも参照できるように大切に保管ください。



オムロン株式会社

© OMRON Corporation 2004-2015 All Rights Reserved.

安全上の要点

以下に示すような項目は安全を確保する上で必要なことですので必ず守ってください。

- 1. 設置環境について
- ・引火性、爆発性ガスの環境では使用しないでください。
- ・操作や保守の安全を確保するため、高電圧機器や動力機器から離して設置して ください。
- ・取付けにおいて、ねじの締め付けは確実に行ってください。
- 2. 電源および配線について
- ・高圧線、動力線と当製品の配線は別配線としてください。同一配線あるいは同一ダクト にすると誘導を受け、誤動作あるいは破損の原因になることがあります。
- 3. その他
- ・本製品を分解したり、修理、改造したりしないでください。
- ・廃棄するときは、産業廃棄物として処理してください。

使用上の注意

製品が動作不能、誤動作、または性能・機器への悪影響を防ぐため、以下のことを守っ てください。

- 1. 設置場所について
- 次のような場所には設置しないでください。
- ・周囲温度が定格の範囲を越える場所
- ・温度変化が急激な場所(結露する場所)
- ・相対湿度が 35 ~ 85%RH の範囲を超える場所
- ・腐食性ガス、可燃性ガスがある場所塵埃、塩分、鉄粉がある場所 ・振動や衝撃が直接加わる場所
- ・ 強い外乱光(レーザ光、アーク溶接光など)があたる
- ・直射日光があたる場所や暖房器具のそば
- ・水・油・化学薬品の飛沫がある場所
- ・強磁界、強電界がある場所
- 2. 電源および接続、配線について
- ・センサヘッドの着脱は、必ず電源を切った状態で行ってください。電源 ON のまま行うと故障の原因になります。
- ・センサヘッドとアンプユニットは、取扱説明書で指定した組合せで使用してください。
- ・専用延長ケーブル (ZFV-XC□B(R)V2) は最大 2 本まで接続可能です。
- ただし総ケーブル長が 18m 以内になるようにしてください。

3. 光軸、検出範囲について

光軸中心はセンサヘッドごとにばらつくことがありますので、取付けるときは必ずアンプユ ニットの液晶モニタで画像の中心と検出範囲を確認してください。ガイド光の中心と検出 範囲は目安です。

- 4. 通気膜について
- ・通気膜をはがしたり、先の尖ったものでつついたりしないでください。保護構造を満足 できなくなるおそれがあります。
- ・通気膜はふさがないでください。センサヘッド前面のパネルが曇るおそれがあります。 5.保守点検について
- ・センサヘッドやアンプユニットの清掃には、シンナー、アルコール、ベンジン、アセトン、 灯油類は使用しないでください。
- ・センサヘッド前面のパネルに、大きなゴミやホコリが付いた場合は、プロアプラシ(カメラ レンズ用)で吹き飛ばしてください。呼気で吹き飛ばすことは避けてください。
- ・小さなゴミやほこりは、柔らかい布で丁寧にふきとってください。強くふくことは避けてく ださい。キズがつくと、誤検出の原因になります。
- 6. ピント調整ボリュームについて

ピント調整ボリュームは5N・m以下で回してください。 破損する恐れがあります。



■フェライトコアの装着

CE

センサヘッドのコネクタ側にフェライトコア(付属品)を装着してください。



※5m品はセンサヘッド側にもフェライトコアを装着してください。

■固定用治具の取付

センサヘッドの側面に、固定用治具(付属品)を 装着してください。 固定用治具は 4 方向どの側面にも取付けること ができます。

· ZFV-SR10/SR50

- (1) 固定用治具の片側のツメ2つをヘッド本体の 2つの溝に合わせます。
- (2) もう1方のツメを押し込みます。"カチッ"と音がするまで押し込んでください。
- (3) 固定用治具がセンサヘッドに固定されている ことを確認します。

· ZFV-SR10R/SR50R

- (1) 固定用治具のベース(黒色)の突起部を本体
- の溝に合わせて本体に取り付けます。
- (2)固定用治具のブラケット(銀色)をベースに合わせて本体に取り付けます。
- (3) 付属のネジ(M3×6)でベースとブラケットを締め
- つけます。 推奨トルク値:0.54 N·m

■固定用治具の取外し

固定用治具と本体ケースの隙間(2 カ所のどちらか)に、マイナスドライバーを差し込んで外してください。

■設置距離

次のグラフはセンサヘッドの形式別に検出範囲と設置距離の関係を表したものです。 センサ ヘッドの形式ごとに値は異なりますので、形式を十分ご確認の上、グラフをご覧ください。



■設置手順

(1) 光学図表から読取った設置距離にセンサヘッドを設置します。

(2) ピント調整ボリュームを左右に回してピントを合わせます。

ピントは、ガイド光(緑色)で確認できます。

ガイド光のピントが合うように調整してください。 センサヘッドの検出範囲はガイド光で確認できます。検査したい部分がガイド光の枠内 に入るように調整してください。





■定格/性能

固定田治旦

固定田治島







ご承諾事項

当社商品は、一般工業製品向けの汎用品として設計製造されています。従いまして、次に 掲げる用途での使用を意図しておらず、お客様が当社商品をこれらの用途に使用される際 には、当社は当社商品に対して一切保証をいたしません。ただし、次に掲げる用途であって も当社の意図した特別な商品用途の場合や特別の合意がある場合は除きます。

- (a) 高い安全性が必要とされる用途(例:原子力制御設備、燃焼設備、航空・宇宙設備、鉄 道設備、昇降設備、娯楽設備、医用機器、安全装置、その他生命・身体に危険が及び うる用途)
- (b) 高い信頼性が必要な用途(例:ガス・水道・電気等の供給システム、24時間連続運転 システム、決済システムほか権利・財産を取扱う用途など)
- (c) 厳しい条件または環境での用途(例:屋外に設置する設備、化学的汚染を被る設備、 電磁的妨害を被る設備、振動・衝撃を受ける設備など)
- (d) カタログ等に記載のない条件や環境での用途
- *(a)から(d)に記載されている他、本カタログ等記載の商品は自動車(二輪車含む。以下同 じ)向けではありません。自動車に搭載する用途には利用しないで下さい。自動車搭載 用商品については当社営業担当者にご相談ください。
- *上記は適合用途の条件の一部です。当社のベスト、総合カタログ、データシート等最新版 のカタログ、マニュアルに記載の保証・免責事項の内容をよく読んでご使用ください。

オムロン株式会社 インダストリアルオートメーションビジネスカンパニー



OMRON

Model **ZFV-SR**

Smart Sensor For Model ZFV-A Sensor head unit

INSTRUCTION SHEET

Thank you for selecting OMRON product. This sheet primarily describes precautions required in installing and operating the product.

Before operating the product, read the sheet thoroughly to acquire sufficient knowledge of the product. For your convenience, keep the sheet at your disposal.

TRACEABILITY INFORMATION:

Importer in EU: Ömron Europe B.V. Wegalaan 67-69 2132 JD Hoofddorp The Netherlands

Manufacturer Omron Corporation, Shiokoji Horikawa, Shimogyo-ku, Kyoto 600-8530 JAPAN

The following notice applies only to products that carry the CE mark: Notice

This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.

E

© OMRON Corporation 2004-2015 All Rights Reserved.

PRECAUTIONS FOR SAFE USE

Please observe the following precautions for safe use of the products.

- (1) Installation Environment
 - · Do not use the product in environments where it can be exposed to inflammable / explosive gas
 - · To secure the safety of operation and maintenance, do not install the product close to high-voltage devices and power devices.
 - · During installation, make sure that screws are tightened firmly.
- (2) Power Supply and Wiring

· High-voltage lines and power lines must be wired separately from this product. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.

(3) Others

Do not attempt to dismantle, repair, or modify the product. · Dispose of this product as industrial waste.

PRECAUTIONS FOR CORRECT USE

Please observe the following precautions to prevent failure to operate, malfunctions, or undesirable effects on product performance.

(1) Installation Site

- Do not install the product in locations subjected to the following conditions:
- · Ambient temperature outside the rating Rapid temperature fluctuations (causing condensation)
- Relative humidity outside the range of 35 to 85%
- · Presence of corrosive or flammable gases
- · Presence of dust, salt, or iron particles
- · Direct vibration or shock
- · Reflection of intense light (such as other laser beams or electric arcwelding machines)
- · Direct sunlight or near heaters
- · Water, oil, or chemical fumes or spray
- Strong magnetic or electric field
- (2) Power Supply and Wiring
- Before connecting/disconnecting the Sensor Head, make sure that the Smart Sensor is turned OFF. The Smart Sensor may break down if the Sensor Head is connected or disconnected while the power is ON.
- Use only combinations of Sensor Heads and Sensor Controllers specified in this sheet.
- Cable extension ZFV-XC B(R)V2 can be connected up to two units more. However, the length of a total cable must be within 18 meters.

(3) Optical Axis and Detection Range

- The center of the optical axis sometimes differs according to each Sensor Head. Duringinstallation, be sure to check the center of the image and the detection range on theLCD monitor of the Amplifier Unit.
- The center of the guide light and detection range are for reference only.
- (4) Ventilation Film
 - Do not peel off or probe the ventilation film with a sharp-pointed object. If you so, the specifications of the protective structure may no longer be satisfied. Do not block the ventilation film. Doing so might cause the front panel to be con-densed.

(5) Maintenance and Inspection

- · Do not use thinner, benzene, acetone or kerosene to clean the Sensor Head and Amplifier Unit.
- If large dust particles adhere to the front Panel of the Sensor Head, use a blower brush (used to clean camera lenses) to blow them off. Do not blow the dust particles with your mouth. · To remove smaller dust particles, wipe gently with a soft cloth. Do not use excessive force
- to wipe off dust particles. Scratches on the front Panel may cause errors. (6) Focus Adjustment Control
- Do not exert the torque of $5N \cdot m$ or more as this might damage the control.



- This section captures the mounting surfaces. (5) Focus adjustment control This control is used for adjusting the focus of the image image. (3) Connector This connector is connected
 - (6) Ventilation film This film prevents the front panel from condensation

Attaching the ferrite core

Attach the ferrite core (provided with the Smart Sensor) to the connector side of the Sensor Head



Installing the mounting fixture

Attach the mounting fixture (provided with the Smart Sensor) to the side of the Sensor Head. The mounting fixture can be installed on all of the four mounting surfaces.

• ZEV-SR10/SR50

- fixture with the two grooves on the Sensor Head body (light emitting side).
- (2) Press in the other hook. Push down until you hear it snap into place. (3) Make sure that the mounting fixture is firmly
- fixed on the Sensor Head.

· ZFV-SR10R/SR50R

- (1) Align the boss of the base part(Black) and groove of the Sensor Head body.
- (2) Attach the bracket(Silver) to the base part.
- (3) Fasten the screw(attached) and fix the parts. Recommended torque value : 0.54 N·m

Removal procedure

Insert a regular screwdriver into the gap (one of the two gaps) between the mounting fixture and the Sensor Head case, and remove the mounting fixture.

Installation distance

The following graphs show the relationship between detection range and setting distance for each model of Sensor Head. Values differ according to each model of Sensor Head, so fully check the model before using these graphs.



Installation procedure

(1) Install the Sensor Head at the installation distance obtained in the above graphs.

(2) Turn the focus adjustment control to the left and right to adjust the focus.

Focus can be verified by the green guide light. Adjust so that the guide light is fine foned. · Turn to right : Focuses to the far side. · Turn to left : Focuses to the near side Default is focus set at furthest point.





Mounting

Hook

Mounting

fixture

Before turning the focus adjustment control slightly to the left and right, make sure that the guide light is not at the upper or lower limit positions. The focus adjustment control is a multi-turn variable resistor. However, the control stops turning at the upper or lower limit positions. Do not exert unnecessary force to turn the control at the upper or lower limit positions as this might damage the control.

Specifications





to the Amplifier Unit.

(1) Align the two hooks on one side of the mounting



Suitability for Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buver's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application product or system Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS. AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

See also Product catalog for Warranty and Limitation of Liability.

Regior	nal Headquarters
	RON EUROPE B.V.
Car	nsor Business Unit I-Benz-Str. 4, D-71154 Nufringen, Germany (49) 7032-811-0/Fax: (49) 7032-811-199
289 Hof	RON ELECTRONICS LLC 5 Greenspoint Parkway, Suite 200 fman Estates, IL 60169 U.S.A. (1) 847-843-7900/Fax: (1) 847-843-7787
No. Ale: Sing	RON ASIA PACIFIC PTE. LTD. 438A Alexandra Road # 05-05/08 (Lobby 2), xandra Technopark, gapore 119967 (65) 6835-3011/Fax: (65) 6835-2711
Roc 200 Pu[RON (CHINA) CO., LTD. om 2211, Bank of China Tower, Yin Cheng Zhong Road, Dong New Area, Shanghai, 200120, China (86) 21-5037-2222/Fax: (86) 21-5037-2200