

MITSUBISHI

General-Purpose AC Servo

MELSERVO

HEAT SINK OUTSIDE MOUNTING ATTACHMENT

MR-ACN

Installation Guide **D**

1. INTRODUCTION

Thank you for choosing the heat sink outside mounting attachment designed for Mitsubishi AC servo (MR-ACN). The heat sink outside mounting attachment is used to install the heat sink of a servo amplifier/converter unit in the outside of a control box. For the handling of the heat sink outside mounting attachment, please read the Instruction Manual or Specifications and Installation Guide of the corresponding servo amplifier/converter unit carefully before using it.

2. COMBINATION

The following table lists the combinations of the heat sink outside mounting attachments and servo amplifiers/converter units:

Heat Sink Outside Mounting Attachment Connected	Servo Amplifier/Converter Unit
MR-ACN350	MR-H350AN • MR-H350BN • MR-H350ACN • MR-H350TN
MR-ACN500	MR-H500AN • MR-H500BN • MR-H500ACN • MR-H500TN
MR-ACN700	MR-H700AN • MR-H700BN • MR-H700ACN • MR-H700TN
MR-ACN11K	MR-H11KAN • MR-H11KBN • MR-H11KACN • MR-H11KTN
MR-ACN22K	MR-H15KAN • MR-H22KAN • MR-H15KBN MR-H22KBN • MR-H15KACN • MR-H22KACN MR-H15KTN • MR-H22KTN
MR-ACN30K	MR-H30KAN4 • MR-H30KBN4 • MR-H30KACN4 MR-H30KTN4 • MR-H30KDN4
MR-ACN55K	MR-H30KAN • MR-H30KBN • MR-H30KACN MR-H30KTN • MR-H30KDN MR-H37KAN4 ~ MR-H55KAN4 MR-H37KBN4 ~ MR-H55KBN4 MR-H37KACN4 ~ MR-H55KACN4 MR-H37KTN4 ~ MR-H55KTN4 MR-H37KDN4 ~ MR-H55KDN4
MR-ACNP55K	MR-HP30KA • MR-HP55KA4