

ES5C-U OMRON

Digital Controller

EN INSTRUCTION MANUAL

Thank you for purchasing the OMRON ES5C-U Digital Controller. This manual describes the functions, performance, and application methods needed for optimum use of the product. Please observe the following items when using the product.

- This product is designed for use by qualified personnel with a knowledge of electrical systems.
- Before using the product, thoroughly read and understand this manual to ensure correct use.
- Keep this manual in a safe location so that it is available for reference whenever required.

OMRON Corporation
All Rights Reserved

Refer to the ES5C-U Digital Controllers User's Manual (Man. No. H174) for detailed application procedures.


Safety Precautions

Key to Warning Symbols

Indicates a potentially hazardous situation which, if not avoided, is likely to result in minor or moderate injury or property damage. Read this manual carefully before using the product.


Wiring

● Dimensions

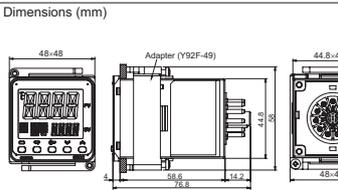

A Setup Tool port is provided on the upper of the product. Use this port to connect a personal computer to the product when using the Setup Tool. ES8-CIF02 USB-Serial Conversion Cable is required to connect the personal computer to the product. (Do not use the product with the USB-Serial Conversion Cable left permanently connected.) Refer to the instruction manual provided with the USB-Serial Conversion Cable for details on connection methods.

Names of Parts on Front Panel

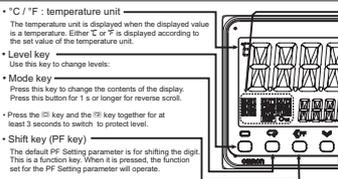

● Operation Menu

Input Type

Input type	Input	Setting	Setting range
Platinum resistance thermometer	PH100	0	-200 to 850 / -300 to 1500
		1	-150 to 500.0 / -199.9 to 800.0
		2	0.0 to 100.0 / 0.0 to 210.0
		3	-199.9 to 500.0 / -199.9 to 800.0
Thermocouple	JPH100	4	0.0 to 1100.0
		K	-200 to 1300 / -300 to 2300
		J	-20.0 to 500.0 / 0.0 to 900.0
		7	-10.0 to 850.0 / -10.0 to 1500.0
		K	-20.0 to 400.0 / 0.0 to 750.0
		T	9 / -20.0 to 400 / -300 to 700
		U	13 / -20.0 to 400 / -300 to 700
		E	11 / -20.0 to 800 / -300 to 1100
		L	12 / -10.0 to 850 / -10.0 to 1500
		U	13 / -20.0 to 400 / -300 to 700
		L	14 / -199.9 to 400.0 / -199.9 to 700.0
		Infrared Thermosensor	ES18
N	16 / 0 to 1700 / 0 to 3000		
S	17 / 0 to 1700 / 0 to 3000		
W	18 / 100 to 1800 / 300 to 2200		
W	19 / 0 to 2300 / 0 to 3200		
PL	20 / 0 to 1300 / 0 to 2300		
1	10 to 210°C / 21 / 0 to 50		
2	60 to 120°C / 22 / 0 to 120		
3	115 to 185°C / 23 / 0 to 165		
4	140 to 260°C / 24 / 0 to 260		
5	4 to 20mA / 25 / 0 to 2000		
6	0 to 20mA / 26 / 0 to 2000		
7	1 to 5V / 27 / 0 to 500		
8	0 to 10V / 28 / 0 to 500		
9	0 to 50V / 29 / 0 to 500		

*The default is "S".
*SEPR will be displayed when a platinum resistance thermometer is mistakenly connected while input type is not set for it. To clear the SEPR display, correct the wiring and cycle the power supply.

Alarms

Setting	Alarm type	Alarm output function
0	No alarm function	Output off
1*	Deviation upper/lower limit	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
	Deviation upper limit	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
2*	Deviation lower limit	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
	Deviation upper/lower range	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
3*	Deviation upper/lower limit standby sequence ON	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
	Deviation upper limit standby sequence ON	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
4*	Deviation lower limit standby sequence ON	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
	Absolute value upper limit	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
5*	Absolute value lower limit	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
	Absolute value upper limit standby sequence ON	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
6*	Absolute value lower limit standby sequence ON	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
	LBA (only for alarm 1)	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
13	PV Change Rate Alarm	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
14	SP absolute value upper limit	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
15	SP absolute value lower limit	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
16	MV absolute value upper limit	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values
17	MV absolute value lower limit	ON: Vary with "L"/"H" values OFF: Vary with "L"/"H" values

*1: Upper and lower limits can be set for parameters 1, 4 and 5 to provide for different types of alarm. These are indicated by the letter "L" and "H".
* The default alarm type is "2"

Warning Symbols

CAUTION
Minor injury due to electric shock may occasionally occur. Do not touch the terminals while power is being supplied.

WARNING
Electric shock, fire, or malfunction may occasionally occur. Do not allow metal objects, conductors, cuttings from installation work, or moisture to enter the Digital Controller, the Setup Tool ports, or between the pins on the connectors on the Setup Tool cable.

Do not use the product where subject to flammable or explosive gas. Otherwise, minor injury from explosion may occasionally occur.

Never disassemble, modify, or repair the product or touch any of the internal parts. Minor electric shock, fire, or malfunction may occasionally occur.

CAUTION - Risk of Fire and Electric Shock
a) This product is UL listed as an Open Type Process Control Equipment. It must be mounted in an enclosure that does not allow fire to escape readily.
b) More than one disconnected switch may be required to de-energize the equipment before servicing.
c) Signal inputs are SELV, limited energy.
d) CAUTION: To reduce the risk of fire or electric shock, do not interconnect the outputs of different Class 2 circuits. If the output relays are used past their life expectancy, contact fusing or burning may occasionally occur. Always consider the application conditions and use the output relays within their rated load and electrical life expectancy. The life expectancy of output relays varies considerably with the output load and switching conditions.
e) Loose screws may occasionally result in fire. Tighten the terminal screws to the specified torque of 0.5 Nm.

Set the parameters of the product so that they are suitable for the system being controlled. If they are not suitable, unexpected operation may occasionally result in property damage or accidents.

A malfunction in the Digital Controller may occasionally make control operations impossible or prevent alarm outputs, resulting in property damage. To maintain safety in the event of malfunction of the Digital Controller, take appropriate safety measures, such as installing a monitoring device on a separate line.

Suitability for Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product.

At the Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

DO NOT USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Precautions for Safe Use


- Be sure to observe the following precautions to prevent operation failure, malfunction, or adverse effects on the performance and functions of the product. Not doing so may occasionally result in unexpected events.
 - The product is designed for indoor use only. Do not use the product outdoors. Do not use or store the product in any of the following conditions:
 - Places directly subject to heat radiated from heating equipment.
 - Places subject to splashing liquid or oil atmosphere.
 - Places subject to direct sunlight.
 - Places subject to dust or corrosive gas (in particular, sulfide gas and ammonia gas).
 - Places subject to intense temperature change.
 - Places subject to icing and condensation.
 - Places subject to vibration and large shocks.
 - Use the product within the rated temperature and humidity ranges. Provide forced-cooling if required. Do not block the ventilation holes on the product.
 - Be sure to wire properly with correct polarity of terminals.
 - Use the specified size of crimped terminals (M3.5, with 7.2 mm or less) for wiring. To connect bare wires to the terminal block, use copper braided or solid wires with a gauge of AWG24 to AWG14 (equal to cross-sectional area of 0.265 to 2.081 mm²). (The stripping length is 5 to 6 mm.) Up to two wires of same size and type, or two crimped terminals can be inserted into one terminal.
 - Do not cut the wires. The terminals which are not used.
 - Allow as much space as possible between the controller and devices that generate a powerful high-frequency or surge. Separate the high-voltage or large-current power lines from other lines, and avoid parallel or crossing wiring with the power lines when you are wiring to the terminals.
 - Use this product within the rated load and power supply.
 - Make sure that the rated voltage is attained within two seconds of turning ON the power using a switch or relay contact. If the voltage is applied gradually, the power may not be reset or output malfunctions may occur.
 - Make sure that the Digital Controller has 30 minutes or more to warm up after turning ON the power before starting actual set-pointing operations to ensure the correct temperature display.
 - When executing self-tuning, turn the load on the ON terminal simultaneously, or turn the load ON before you turn the controller ON.
 - A switch or circuit breaker should be provided close to this unit. The switch or circuit breaker should be within easy reach of the operator, and must be marked as a disconnecting means for this unit.
 - Wipe off any dirt from the Digital Controller with a soft dry cloth. Never use thinners, benzene, alcohol, or any cleaners that contain these or other organic solvents. Deformation or discoloration may occur.
 - Design system (control panel, etc.) considering the 2 second of delay that the controller's output to set after power is applied.
 - The output will turn OFF when you move to the Initial Setting Level. Take this into consideration when performing control.
 - The number of non-volatile memory write operations is limited. Therefore, use RAM write mode when frequently conducting data during communications or other operations.
 - When disassembling the Temperature Controller for disposal, use suitable tools.
 - Do not turn the power supply to the Digital Controller ON or OFF while the USB-Serial Conversion Cable is connected. The Digital Controller may malfunction.
 - The terminals can reach temperature of up to 65°C.

Specifications


Power supply voltage	100 to 240 VAC, 50/60 Hz or 24 VDC, 500mA/1 A VDC
Operating voltage range	85 to 110% of the rated voltage
Power consumption	5.2 VA max. (100 to 240 VAC) 3.1 VA max. (24 VDC)
Indication accuracy (Ambient temperature: 23°C)	1.6 W max. (24 VDC) (±1.0 % of indication value or ±2°C, whichever is greater) ±1 digit max. Platinum resistance thermometer: (±0.2 % of indication value or ±0.8°C, whichever is greater) ±1 digit max. Analog input: (±0.2 % FS ±1 digit max.)
Control output 1	Relay output: SPDT, 250 VAC, 3 A (resistive load) Electrical life of relay: 100,000 operations (for driving SSR); 100,000 operations (for driving SSR); Linear current output: 4 to 20 mA DC, 0 to 20 mA DC Load: 500 Ω max. ON/OFF or P/O control: Relay outputs: SPST-NO, 250 VAC, 3 A (resistive load) Electrical life of relay: 100,000 operations (Avoid freezing or condensation)
Control method	Relay output: SPST-NO, 250 VAC, 3 A (resistive load)
Auxiliary output	Relay output: SPST-NO, 250 VAC, 3 A (resistive load)
Ambient temperature	-10 to 55°C (Avoid freezing or condensation)
Ambient humidity	25% to 85% (Avoid freezing or condensation)
Storage temperature	Max. 2,000°C (Avoid freezing or condensation)
Altitude	72A, 250 VAC, time-lag, low-breaking capacity
Recommended fuse	Approx. 100 g Digital Controller only
Weight	Front panel: IP20
Degree of protection	Installation category: IP20
Installation environment	Installation category: IP20
Memory protection	Non-volatile memory (Number of write operations: 1,000,000)
Temporary overvoltage	Long-term: 250V + (Power supply voltage) Short-term: 1200V + (Power supply voltage)

Connections


(The applicability of the electric terminals varies with the type of machine.)

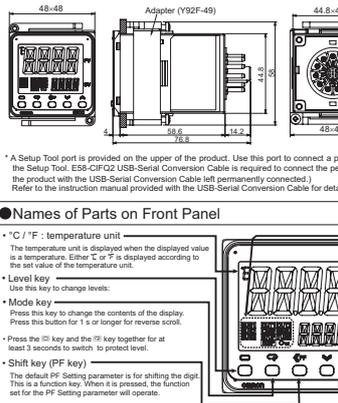

Surface mounting

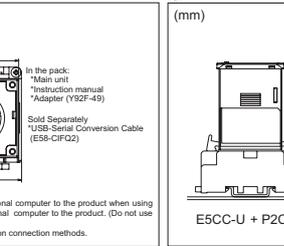

Installation

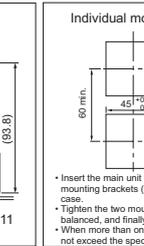


Insert the main unit through the mounting hole in the panel (1 to 5 mm thickness). Insert the mounting brackets (supplied) into the fitting slots located on the top and bottom of the rear case.


Tighten the two mounting screws on the top and bottom of the adapter to keep them balanced, and finally tighten them to a torque of between 0.29 and 0.39 N·m.

When more than one machine is installed, make sure that the ambient temperature does not exceed the specified limit.


Connections (The applicability of the electric terminals varies with the type of machine.)

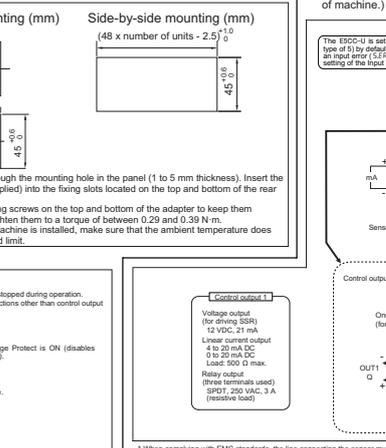


Connections (The applicability of the electric terminals varies with the type of machine.)

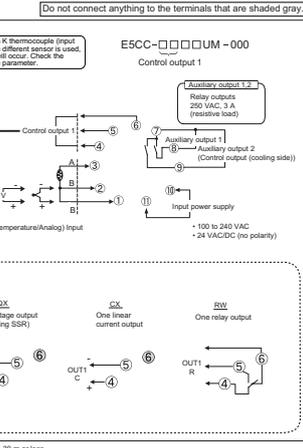


Initial Setting Level

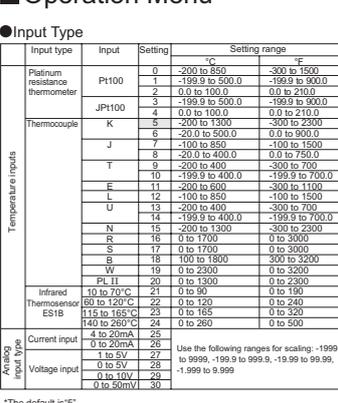


Operation Level

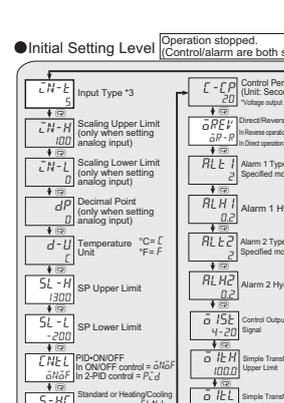

Adjustment Level

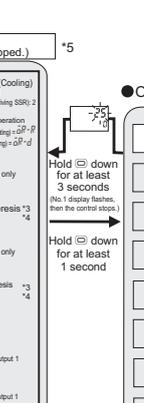

Protect Level

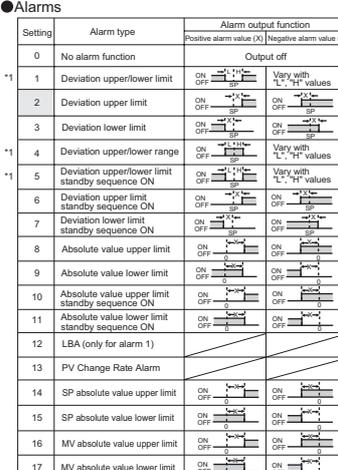

Error Display (troubleshooting)

No. display	Meaning	Action	Status at error
SERR (S Err)	Input error	Check the setting of the input type parameter, check the input wiring, and check the input status in the temperature's status.	Alarm occurs as above.
E333 (E333)	AD converter error	After the check of input error, turn the power OFF then back ON again. If the display remains the same, the controller must be repaired. If the display is restored to normal, then a probable cause is an external noise affecting the control system. Check for external noise.	OFF
E111 (E111)	Memory error	Turn the power OFF then back ON again. If this display remains the same, the controller must be repaired. If the display is restored to normal, then a probable cause is an external noise affecting the control system. Check for external noise.	OFF

If the input value exceeds the display limits (1999 to 9999), though it is within the control range, [E333] will be displayed under -1999 and [E333] above 9999. Under these conditions, control and alarm output will operate normally.

Refer to the ES5C-U Digital Controllers User's Manual (Man. No. H174) for the controllable ranges.

*2: Error shown only for "Process value / Set point". Not shown for other status.

Conformance to EN/IEC Standards

This is a class A product.
In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.

Conformance to Safety Standards

Reinforced insulation is provided between input power supply, relay outputs, and between other terminals.
Do not allow temporary overvoltages on the primary circuit to exceed the following values.
Check the power supply voltage to the Digital Controller.
Short-term overvoltage: 1,200 V + (Power supply voltage)
Long-term overvoltage: 250 V + (Power supply voltage)
Always externally connect the recommended fuse that is specified in the Instruction Manual before you use the Digital Controller.

Analog Input

- If you input an analog voltage or current, set the Input Type parameter to the correct input type.
- Do not use the Digital Controller to measure a circuit with a measurement Category II, III, or IV.
- Do not use the Digital Controller to measure an energized circuit with a voltage that exceeds 30 Vrms or 60 VDC is applied.

The protection provided by the Digital Controller may be impaired if the Digital Controller is used in a manner that is not specified by the manufacturer.

This product with socket P2CF-11(E) or P3GA-11 gets the UL Listing Certification. It must be used with the socket which mentioned above.

Other functions

Refer to the ES5C-U Digital Controllers User's Manual (Man. No. H174) for information on the Advanced Function Setting Level, Manual Control Level, and other functions.

OMRON EUROPE B.V.
Wegalaan 67-69, NL-2132 JD Hoofddorp The Netherlands
Phone 31-2356-81-300
FAX 31-2356-81-388

OMRON ELECTRONICS LLC
One Commerce Drive Schaumburg, IL 60173-5302 U.S.A
Phone 1-847-843-7900
FAX 1-847-843-7787

OMRON ASIA PACIFIC PTE. LTD.
No. 438A Alexandra Road #05-05/08 (Lobby 2),
Alexandra Technopark, Singapore 119967
Phone 65-6835-3011
FAX 65-6835-2711

OMRON Corporation
Shiojiki Horikawa, Shimogyo-ku, Kyoto 600-8530 JAPAN

